I63-216 Industrial 2-port Gigabit PoE Injector
Quick Installation Guide

PACKAGE CONTENTS

* 1x PoE injector	* 1x Quick Installation Guide

CONNECTION

Installation Steps:

1. Connect the power cable to the injector. The Power LED (Green) should be lit.
2. Connect the Data IN port to a LAN switch using an Ethernet cable.
3. Connect the Power+Data OUT port to a powered device, i.e., IP camera, using another Ethernet cable. Make sure the PoE LED is lit.
4. Check if the powered device (IP camera) is working properly. An IP camera may take up to 1 or 2 minutes to power up.

LED definitions

Power	Green ON: power good; OFF: power failed.
PoE	Amber ON: PD datected

Application

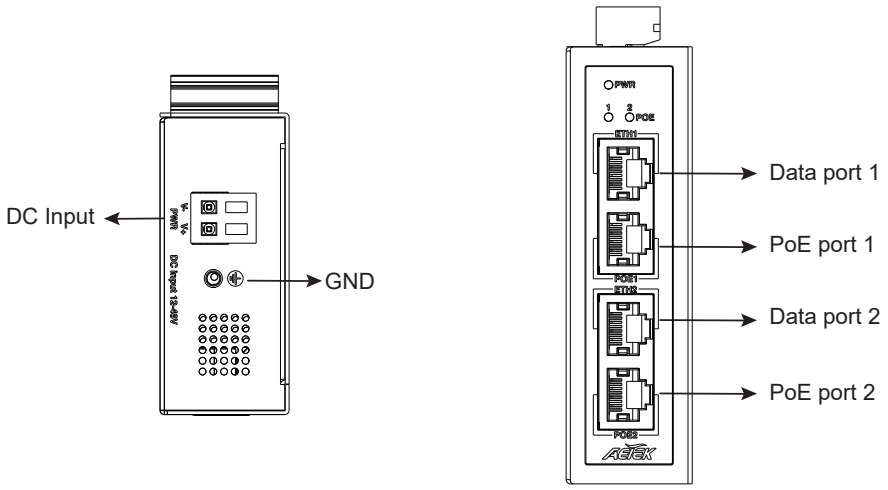

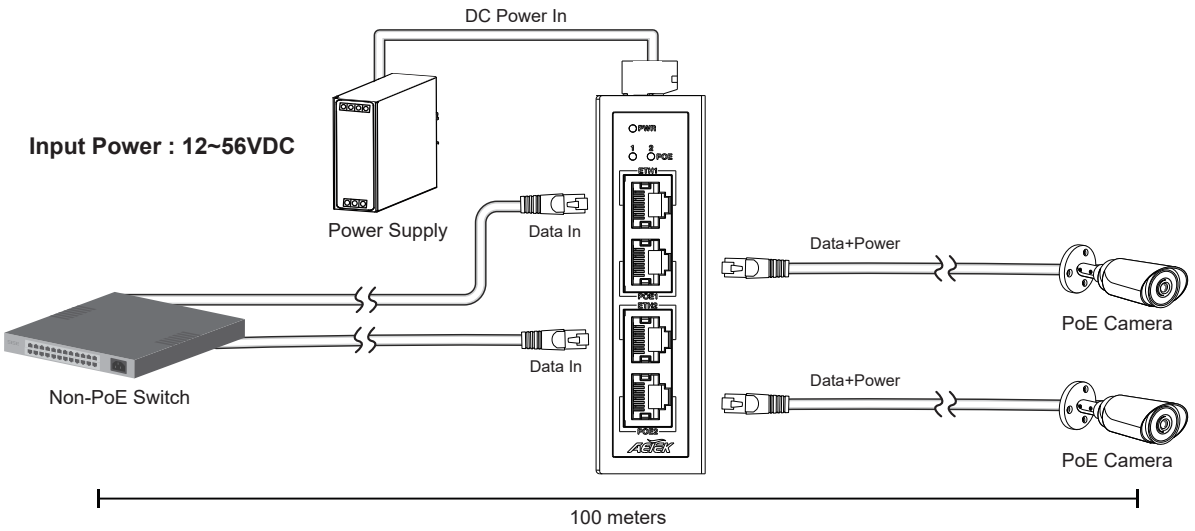

AETEK INC.
6F, No.192-1, Lien-Cheng Rd., Chung-Ho, New Taipei City, 235, Taiwan, R.O.C.
| **T:** +886-2-82452822 | **W:** www.aetektec.com | **E:** sales@aetektec.com

All specifications are subject to change without noice.
Copyright © 2025 AETEK INC. All rights reserved.